



USER MANUAL



PL-3R VALKYRIE

Max 1,500 Lumens WML Built-in 900mAh Lithium Polymer Battery.

Table 1: Specification

COOL WHITE CCT: 5700K CRI: 70

HIGH 1	1,500 lumens	2min	36min	8.5min
HIGH 2	1,000 lumens	12min	23min	8.5min
LOW	300 lumens		100min	

10.200cd
205m
IPX6
1m
Working temperature: -10~40°C

UL61*W03R5*W03Z5mm
UL3*W01W1*W4*W01Z5mm
3*W01Z5D043*3*7V
Rechargeable lithium polymer battery

* Above data are tested per ANSI/NEMA FL 1-2019 standard in Olight's labs for reference.

Table 2: MCC

Cable length	0.5m
Input	USB-A 5V 1A
Output	CC/CV 4.2V±0.05V 1A
Time to fully charge	About 80min




1913 Adapter and Screw
H2.5/H1.5 Wrench

Table 1: Specification

COOL WHITE CCT: 5700K CRI: 70

HIGH 1	1,500 lumens	2min	36min	8.5min
HIGH 2	1,000 lumens	12min	23min	8.5min
LOW	300 lumens		100min	

10.200cd
205m
IPX6
1m
Working temperature: -10~40°C

UL61*W03R5*W03Z5mm
UL3*W01W1*W4*W01Z5mm
3*W01Z5D043*3*7V
Rechargeable lithium polymer battery

* Above data are tested per ANSI/NEMA FL 1-2019 standard in Olight's labs for reference.

<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</p> <p>2.11 改变高亮档亮度, 参见Figure 8.</p> <p>在关机状态下, 快速连续单击任意按钮10次以上, 且在最后一次按下并保持1S以上, 此时可以改变高亮档亮度 (以下表示高亮档1, 以下表示高亮档1), 松开按键关闭。</p>
--	--

<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</p> <p>2.11 改变高亮档亮度, 参见Figure 8.</p> <p>在关机状态下, 快速连续单击任意按钮10次以上, 且在最后一次按下并保持1S以上, 此时可以改变高亮档亮度 (以下表示高亮档1, 以下表示高亮档1), 松开按键关闭。</p>
--	--

Figure 1 Charging







Table 1: Specification

COOL WHITE CCT: 5700K CRI: 70

HIGH 1	1,500 lumens	2min	36min	8.5min
HIGH 2	1,000 lumens	12min	23min	8.5min
LOW	300 lumens		100min	

10.200cd
205m
IPX6
1m
Working temperature: -10~40°C

UL61*W03R5*W03Z5mm
UL3*W01W1*W4*W01Z5mm
3*W01Z5D043*3*7V
Rechargeable lithium polymer battery

* Above data are tested per ANSI/NEMA FL 1-2019 standard in Olight's labs for reference.

<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</p> <p>2.11 改变高亮档亮度, 参见Figure 8.</p> <p>在关机状态下, 快速连续单击任意按钮10次以上, 且在最后一次按下并保持1S以上, 此时可以改变高亮档亮度 (以下表示高亮档1, 以下表示高亮档1), 松开按键关闭。</p>
--	--

Figure 2-2 Adjust the installation position of the light




Figure 2-3 Screw on

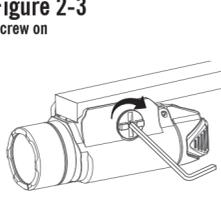


Figure 2-1 Screw off



<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</p> <p>2.11 改变高亮档亮度, 参见Figure 8.</p> <p>在关机状态下, 快速连续单击任意按钮10次以上, 且在最后一次按下并保持1S以上, 此时可以改变高亮档亮度 (以下表示高亮档1, 以下表示高亮档1), 松开按键关闭。</p>
--	--

Figure 2-2 Adjust the installation position of the light




Figure 2-3 Screw on


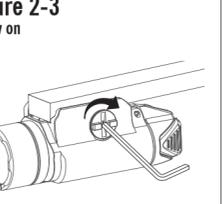


Figure 2-1 Screw off

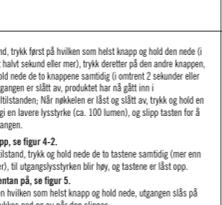

<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</p> <p>2.11 改变高亮档亮度, 参见Figure 8.</p> <p>在关机状态下, 快速连续单击任意按钮10次以上, 且在最后一次按下并保持1S以上, 此时可以改变高亮档亮度 (以下表示高亮档1, 以下表示高亮档1), 松开按键关闭。</p>
--	--

Figure 3 Turn the light on/off




Figure 4-1 Lock

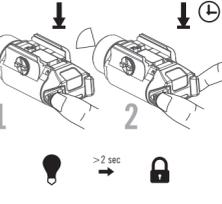


Figure 4-2 Unlock



<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</p> <p>2.11 改变高亮档亮度, 参见Figure 8.</p> <p>在关机状态下, 快速连续单击任意按钮10次以上, 且在最后一次按下并保持1S以上, 此时可以改变高亮档亮度 (以下表示高亮档1, 以下表示高亮档1), 松开按键关闭。</p>
--	--

Figure 4-2 Unlock




Figure 6 Change brightness level


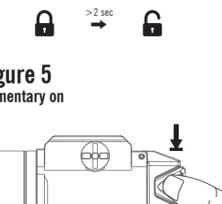


Figure 7 Direct access to high brightness

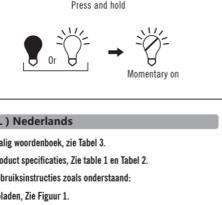

<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</p> <p>2.11 改变高亮档亮度, 参见Figure 8.</p> <p>在关机状态下, 快速连续单击任意按钮10次以上, 且在最后一次按下并保持1S以上, 此时可以改变高亮档亮度 (以下表示高亮档1, 以下表示高亮档1), 松开按键关闭。</p>
--	--

Figure 6 Change brightness level




Figure 7 Direct access to high brightness

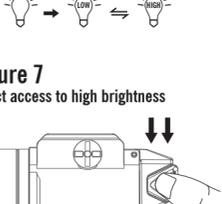


Figure 8 Change high brightness level




<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</p> <p>2.11 改变高亮档亮度, 参见Figure 8.</p> <p>在关机状态下, 快速连续单击任意按钮10次以上, 且在最后一次按下并保持1S以上, 此时可以改变高亮档亮度 (以下表示高亮档1, 以下表示高亮档1), 松开按键关闭。</p>
--	--

Figure 8 Change high brightness level




Figure 9 Strobe

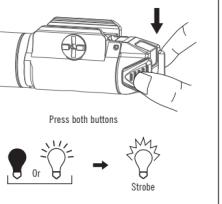

<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</p> <p>2.11 改变高亮档亮度, 参见Figure 8.</p> <p>在关机状态下, 快速连续单击任意按钮10次以上, 且在最后一次按下并保持1S以上, 此时可以改变高亮档亮度 (以下表示高亮档1, 以下表示高亮档1), 松开按键关闭。</p>
--	--

CONTENTS

<p>(EN) English 01</p> <p>(CN) 简体中文 02</p> <p>(FI) Finnish 03</p> <p>(NO) Norwegian 04</p> <p>(SV) Swedish 05</p> <p>(NL) Nederlands 07</p> <p>(PL) Polska 08</p> <p>(DE) Deutsch 09</p> <p>(HU) Magyarorszig 10</p> <p>(RU) Русский 12</p> <p>(ES) Español 13</p> <p>(RO) Romanesc 15</p> <p>(UA) Ukrainian 16</p> <p>(JP) 日本語 17</p> <p>(KR) 한국어 18</p> <p>(TH) ไทย 19</p> <p>(FR) Français 20</p> <p>(IT) Italiano 22</p> <p>(SK) Slovenskýjazyk 23</p> <p>(PT) Português 24</p>	<p>2.1 Product specification, see Table 1 and Table 2.</p> <p>2.2 Operating instructions as below:</p> <p>2.1 Charging, see Figure 1.</p> <p>2.2 Screw off, see Figure 2-1.</p> <p>2.3 Adjust the installation position of the light, see Figure 2-2.</p> <p>2.4 Screw on, see Figure 2-3.</p> <p>2.5 Turn the light on/off, see Figure 3.</p> <p>2.6 Quickly single press (press and quickly release) any key, the output will stay lit. Click the button again and the output turns off.</p> <p>2.7 Lock, see Figure 4-1.</p> <p>In the off state, first press any button and hold it (for about half a second or more), then press the other button, press and hold the two buttons simultaneously (for about 2 seconds or more) until the output is turned off, the product has now entered the lock key state. When the key is locked and turned off, press and hold any key to output a lower brightness (about 100 lumens), and release the key to turn off the output.</p> <p>2.7 Unlock, see Figure 4-2.</p> <p>In the key lock state, press and hold the two keys at the same time (more than 2 seconds), until the output brightness becomes high, and the keys are unlocked.</p> <p>2.8 Momentary on, see Figure 5.</p> <p>Press any button and hold, output turns on when pressed and off when released.</p> <p>2.9 Change brightness level, see Figure 6.</p> <p>In the power-on state, quickly double-click any button, and the output brightness will switch between low-brightness and high-brightness.</p> <p>2.10 Direct access to high brightness, see Figure 7.</p> <p>In the off state, quickly double-click the button to directly access the highest output.</p> <p>2.11 Change high brightness level, see Figure 8.</p> <p>In the off state, quickly click any key more than 10 times, press and hold for more than 1 second on the last press. At this time, you can change the high brightness (blinks once for brightness 2, blink twice for brightness 1), release the key to finish the process.</p> <p>01</p>
---	--

<p>(EN) English 01</p> <p>(CN) 简体中文 02</p> <p>(FI) Finnish 03</p> <p>(NO) Norwegian 04</p> <p>(SV) Swedish 05</p> <p>(NL) Nederlands 07</p> <p>(PL) Polska 08</p> <p>(DE) Deutsch 09</p> <p>(HU) Magyarorszig 10</p> <p>(RU) Русский 12</p> <p>(ES) Español 13</p> <p>(RO) Romanesc 15</p> <p>(UA) Ukrainian 16</p> <p>(JP) 日本語 17</p> <p>(KR) 한국어 18</p> <p>(TH) ไทย 19</p> <p>(FR) Français 20</p> <p>(IT) Italiano 22</p> <p>(SK) Slovenskýjazyk 23</p> <p>(PT) Português 24</p>	<p>2.1 Product specification, see Table 1 and Table 2.</p> <p>2.2 Operating instructions as below:</p> <p>2.1 Charging, see Figure 1.</p> <p>2.2 Screw off, see Figure 2-1.</p> <p>2.3 Adjust the installation position of the light, see Figure 2-2.</p> <p>2.4 Screw on, see Figure 2-3.</p> <p>2.5 Turn the light on/off, see Figure 3.</p> <p>2.6 Quickly single press (press and quickly release) any key, the output will stay lit. Click the button again and the output turns off.</p> <p>2.7 Lock, see Figure 4-1.</p> <p>In the off state, first press any button and hold it (for about half a second or more), then press the other button, press and hold the two buttons simultaneously (for about 2 seconds or more) until the output is turned off, the product has now entered the lock key state. When the key is locked and turned off, press and hold any key to output a lower brightness (about 100 lumens), and release the key to turn off the output.</p> <p>2.7 Unlock, see Figure 4-2.</p> <p>In the key lock state, press and hold the two keys at the same time (more than 2 seconds), until the output brightness becomes high, and the keys are unlocked.</p> <p>2.8 Momentary on, see Figure 5.</p> <p>Press any button and hold, output turns on when pressed and off when released.</p> <p>2.9 Change brightness level, see Figure 6.</p> <p>In the power-on state, quickly double-click any button, and the output brightness will switch between low-brightness and high-brightness.</p> <p>2.10 Direct access to high brightness, see Figure 7.</p> <p>In the off state, quickly double-click the button to directly access the highest output.</p> <p>2.11 Change high brightness level, see Figure 8.</p> <p>In the off state, quickly click any key more than 10 times, press and hold for more than 1 second on the last press. At this time, you can change the high brightness (blinks once for brightness 2, blink twice for brightness 1), release the key to finish the process.</p> <p>01</p>
---	--

<p>(EN) English 01</p> <p>(CN) 简体中文 02</p> <p>(FI) Finnish 03</p> <p>(NO) Norwegian 04</p> <p>(SV) Swedish 05</p> <p>(NL) Nederlands 07</p> <p>(PL) Polska 08</p> <p>(DE) Deutsch 09</p> <p>(HU) Magyarorszig 10</p> <p>(RU) Русский 12</p> <p>(ES) Español 13</p> <p>(RO) Romanesc 15</p> <p>(UA) Ukrainian 16</p> <p>(JP) 日本語 17</p> <p>(KR) 한국어 18</p> <p>(TH) ไทย 19</p> <p>(FR) Français 20</p> <p>(IT) Italiano 22</p> <p>(SK) Slovenskýjazyk 23</p> <p>(PT) Português 24</p>	<p>2.1 Product specification, see Table 1 and Table 2.</p> <p>2.2 Operating instructions as below:</p> <p>2.1 Charging, see Figure 1.</p> <p>2.2 Screw off, see Figure 2-1.</p> <p>2.3 Adjust the installation position of the light, see Figure 2-2.</p> <p>2.4 Screw on, see Figure 2-3.</p> <p>2.5 Turn the light on/off, see Figure 3.</p> <p>2.6 Quickly single press (press and quickly release) any key, the output will stay lit. Click the button again and the output turns off.</p> <p>2.7 Lock, see Figure 4-1.</p> <p>In the off state, first press any button and hold it (for about half a second or more), then press the other button, press and hold the two buttons simultaneously (for about 2 seconds or more) until the output is turned off, the product has now entered the lock key state. When the key is locked and turned off, press and hold any key to output a lower brightness (about 100 lumens), and release the key to turn off the output.</p> <p>2.7 Unlock, see Figure 4-2.</p> <p>In the key lock state, press and hold the two keys at the same time (more than 2 seconds), until the output brightness becomes high, and the keys are unlocked.</p> <p>2.8 Momentary on, see Figure 5.</p> <p>Press any button and hold, output turns on when pressed and off when released.</p> <p>2.9 Change brightness level, see Figure 6.</p> <p>In the power-on state, quickly double-click any button, and the output brightness will switch between low-brightness and high-brightness.</p> <p>2.10 Direct access to high brightness, see Figure 7.</p> <p>In the off state, quickly double-click the button to directly access the highest output.</p> <p>2.11 Change high brightness level, see Figure 8.</p> <p>In the off state, quickly click any key more than 10 times, press and hold for more than 1 second on the last press. At this time, you can change the high brightness (blinks once for brightness 2, blink twice for brightness 1), release the key to finish the process.</p> <p>01</p>
---	--

<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</p> <p>2.11 改变高亮档亮度, 参见Figure 8.</p> <p>在关机状态下, 快速连续单击任意按钮10次以上, 且在最后一次按下并保持1S以上, 此时可以改变高亮档亮度 (以下表示高亮档1, 以下表示高亮档1), 松开按键关闭。</p>
--	--

<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</p> <p>2.11 改变高亮档亮度, 参见Figure 8.</p> <p>在关机状态下, 快速连续单击任意按钮10次以上, 且在最后一次按下并保持1S以上, 此时可以改变高亮档亮度 (以下表示高亮档1, 以下表示高亮档1), 松开按键关闭。</p>
--	--

<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</p> <p>2.11 改变高亮档亮度, 参见Figure 8.</p> <p>在关机状态下, 快速连续单击任意按钮10次以上, 且在最后一次按下并保持1S以上, 此时可以改变高亮档亮度 (以下表示高亮档1, 以下表示高亮档1), 松开按键关闭。</p>
--	--

<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</p> <p>2.11 改变高亮档亮度, 参见Figure 8.</p> <p>在关机状态下, 快速连续单击任意按钮10次以上, 且在最后一次按下并保持1S以上, 此时可以改变高亮档亮度 (以下表示高亮档1, 以下表示高亮档1), 松开按键关闭。</p>
--	--

<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</p> <p>2.11 改变高亮档亮度, 参见Figure 8.</p> <p>在关机状态下, 快速连续单击任意按钮10次以上, 且在最后一次按下并保持1S以上, 此时可以改变高亮档亮度 (以下表示高亮档1, 以下表示高亮档1), 松开按键关闭。</p>
--	--

<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</p> <p>2.11 改变高亮档亮度, 参见Figure 8.</p> <p>在关机状态下, 快速连续单击任意按钮10次以上, 且在最后一次按下并保持1S以上, 此时可以改变高亮档亮度 (以下表示高亮档1, 以下表示高亮档1), 松开按键关闭。</p>
--	--

<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</p> <p>2.11 改变高亮档亮度, 参见Figure 8.</p> <p>在关机状态下, 快速连续单击任意按钮10次以上, 且在最后一次按下并保持1S以上, 此时可以改变高亮档亮度 (以下表示高亮档1, 以下表示高亮档1), 松开按键关闭。</p>
--	--

<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</p> <p>2.11 改变高亮档亮度, 参见Figure 8.</p> <p>在关机状态下, 快速连续单击任意按钮10次以上, 且在最后一次按下并保持1S以上, 此时可以改变高亮档亮度 (以下表示高亮档1, 以下表示高亮档1), 松开按键关闭。</p>
--	--

<p>2.12 Strobe, see Figure 8.</p> <p>When the two buttons are pressed simultaneously, strobe mode will be activated. The strobe will continue when the button is released. Click any button to turn off the strobe.</p>	<p>2.10 直接亮档, 参见Figure 7.</p> <p>在关机状态下, 快速双击按键, 直接输出亮档。</</p>
--	--