


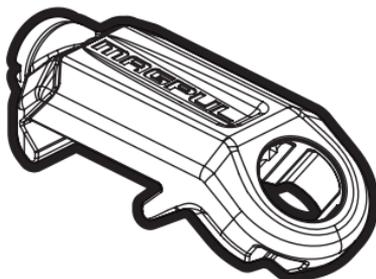

RSA™ QD


Rail Sling Attachment



- ⚠ **WARNING:** BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.
- ⚠ **CAUTION:** PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING. COMPONENTS UNDER SPRING PRESSURE MAY EJECT FORCEFULLY AND COULD CAUSE INJURY.
- ⚠ **WARNING:** OBSERVE SAFE FIREARM HANDLING PRACTICES AT ALL TIMES. FAILURE TO DO SO MAY RESULT IN SERIOUS BODILY INJURY OR DEATH. MAGPUL INDUSTRIES SHALL NOT BE RESPONSIBLE FOR INJURY, DEATH OR PROPERTY DAMAGE RESULTING FROM FAULTY INSTALLATION, MISUSE, ILLEGAL USE, OR MODIFICATION OF THIS PRODUCT.

INSTALLATION INSTRUCTIONS

STEP 1: POSITION ON RAIL AND TIGHTEN SCREW

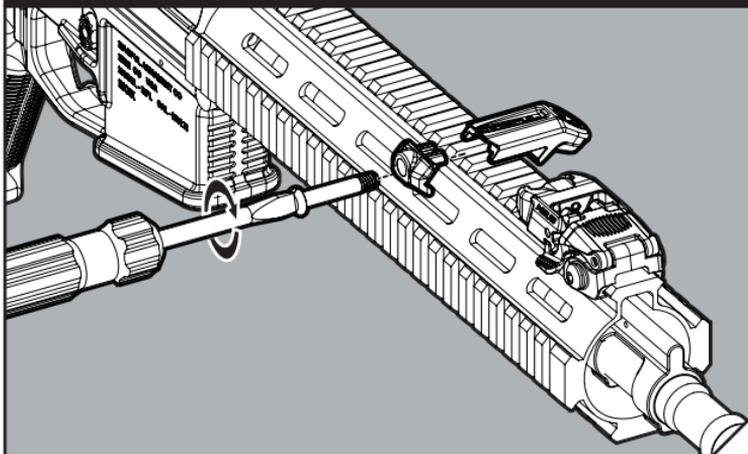

⚠ DO NOT OVER TIGHTEN.

Using a flathead screw driver, remove the 10-24 x 1 1/8" Slotted Head Shoulder Screw. Once the screw is removed, the RSA QD Clamp will be free. Hook the RSA QD Body to the desired rail position and line up the clamp. Once aligned, install and tighten the Slotted Head Shoulder Screw.

NOTE: Torque value = 15in-lbs. Over tightening may cause damage to rail or the RSA.